


MeetingBar A40 Deployment & Connection

Package Contents

TIP

For the MeetingBar A40 unboxing video, please refer to [Teams Video: MeetingBar A40 Unboxing](#) / [Zoom Video: MeetingBar A40 Unboxing](#).

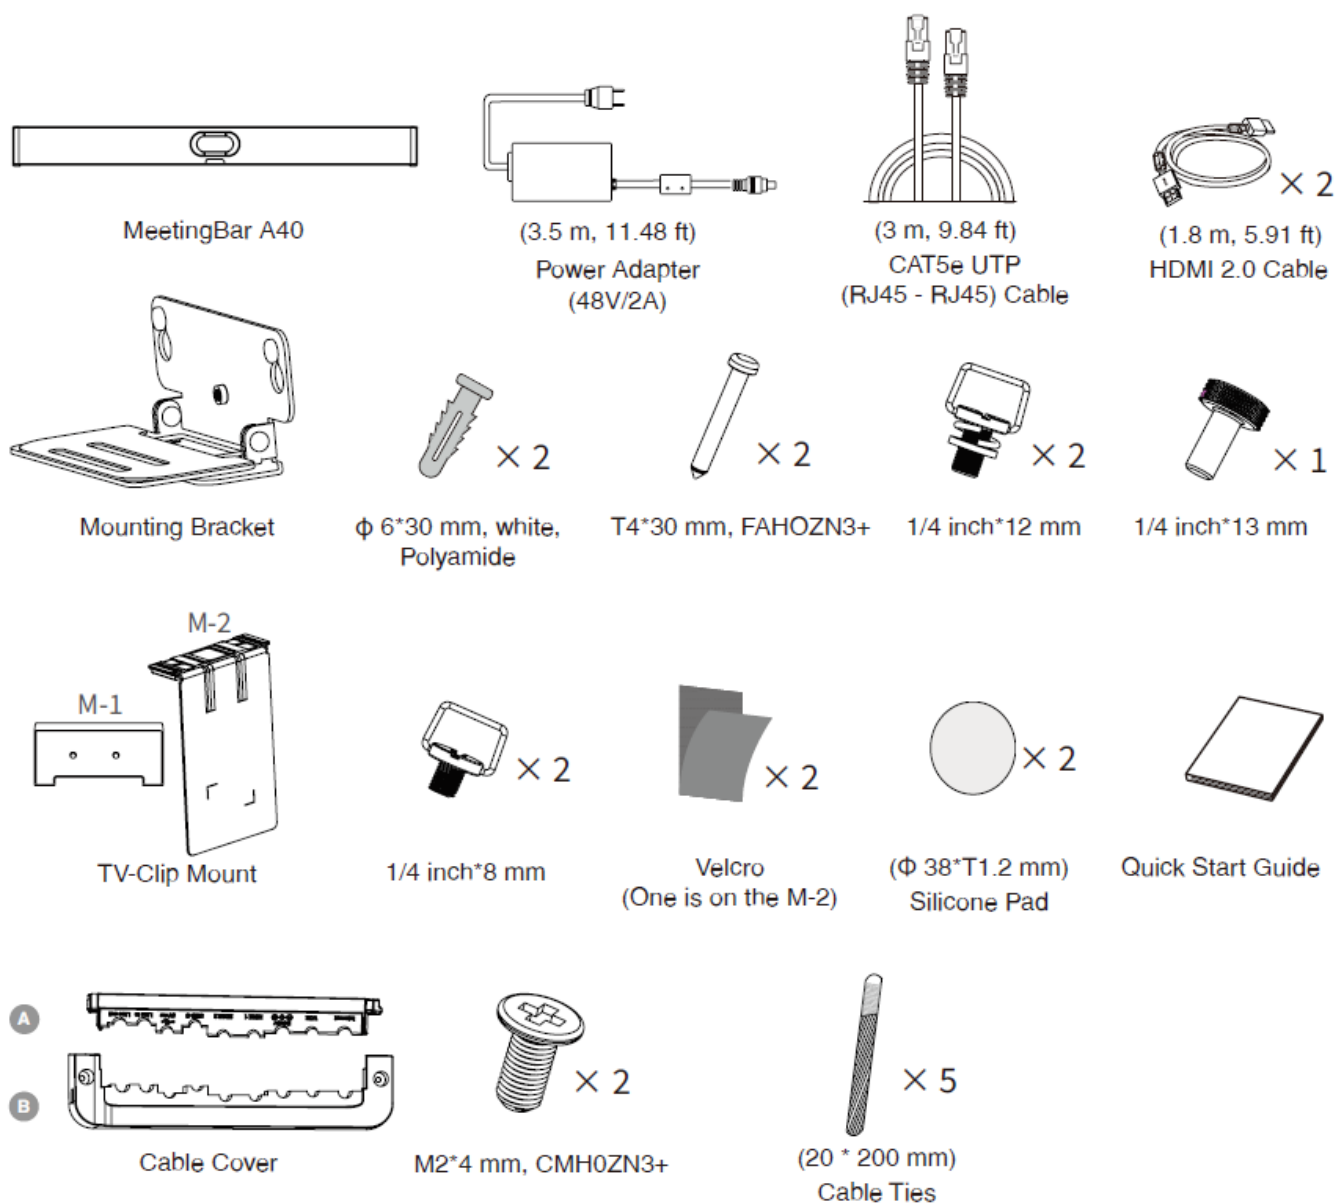

Optional Packages

A



VCR11 and
AAA Battery × 2

B



CTP25 Package

C

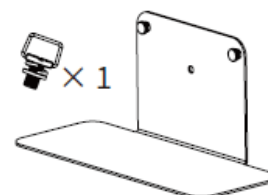



Table-top Stand

Connect/Pair MeetingBar A40

For a better pairing experience, we recommend starting the MeetingBar A40 first and then the CTP25. Refer to [Connection - Teams](#)/[Connection - Zoom](#) to connect CTP25 to MeetingBar A40.

NOTE

- Display requirement: A resolution of 1080p or higher, and a port that supports HDMI 1.4 or higher.
- If you only need to use one display, please connect to HDMI 1 port.

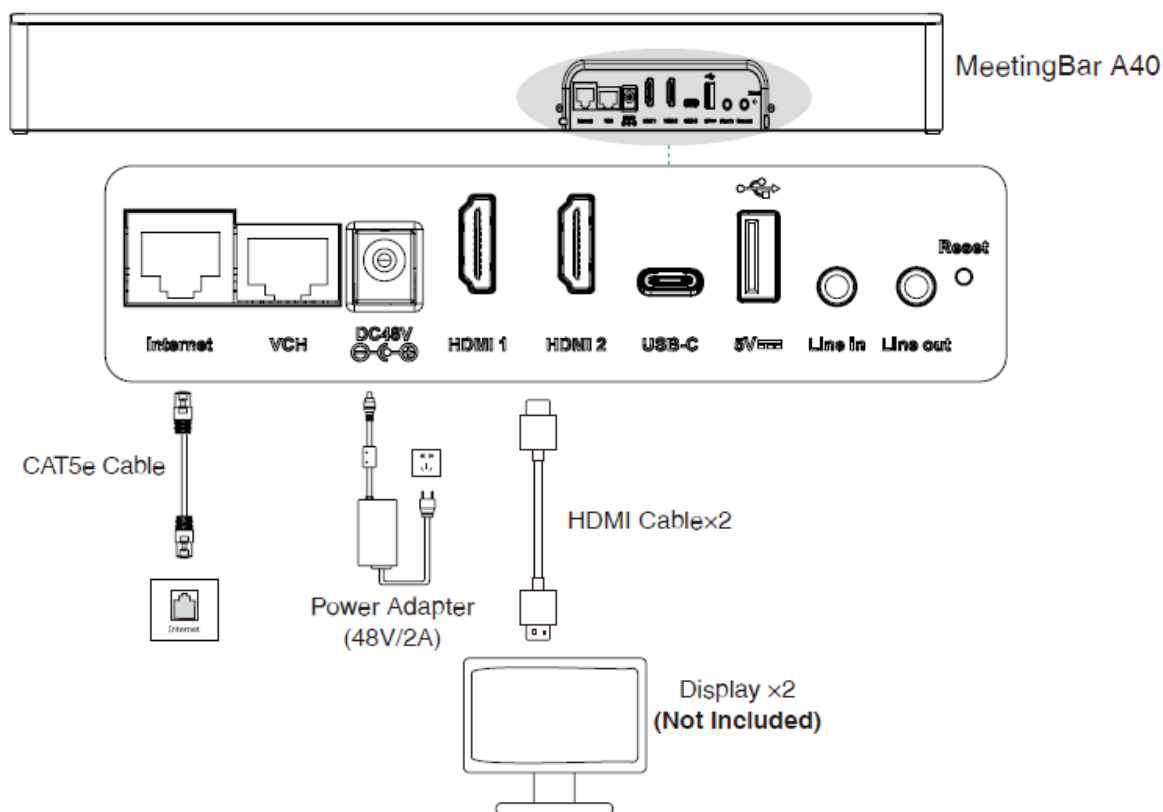


Assemble Cable Cover


- 1 Find the two slots on the back of A40.



- 2 Fit part A of the cable cover into the slots.

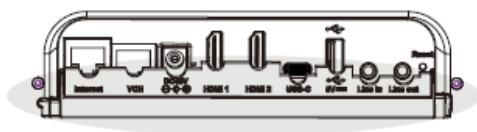

- 3 Assemble part B and fix the screws.

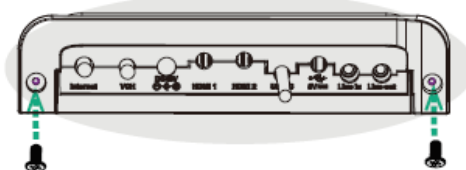


Install MeetingBar A40

Mount on a wall


1. Determine A40 position

The mounting height affects your camera view. The recommended installation height is 110 cm above the ground, and the reserved distance between A40 and TV should be greater than 1 cm.

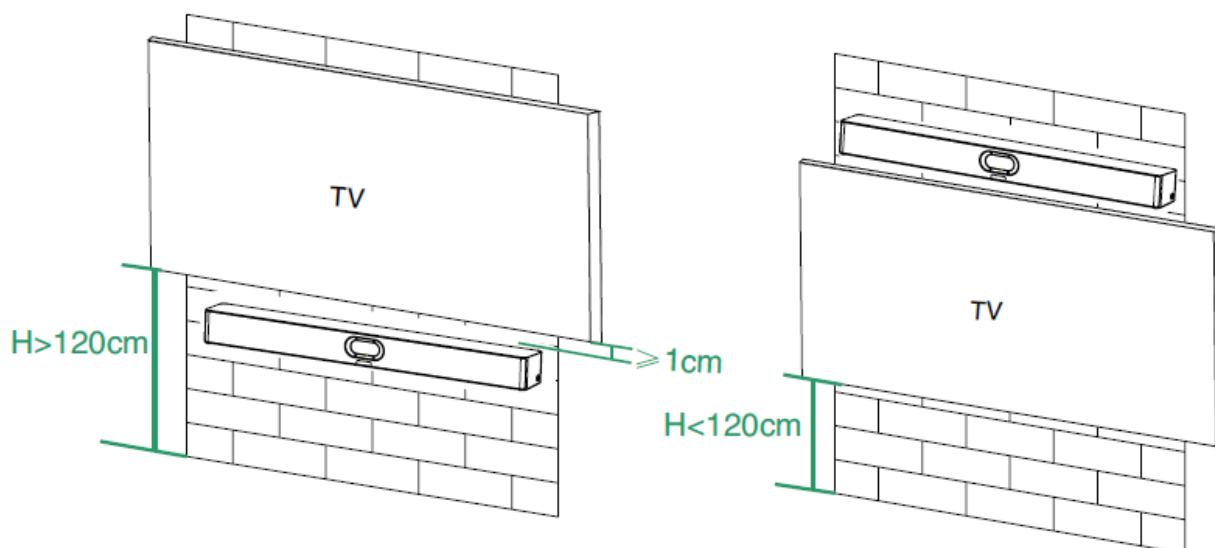

2. Mount the A40 to the wall


Hole depth: 6 mm, Hole diameter: 30 mm.

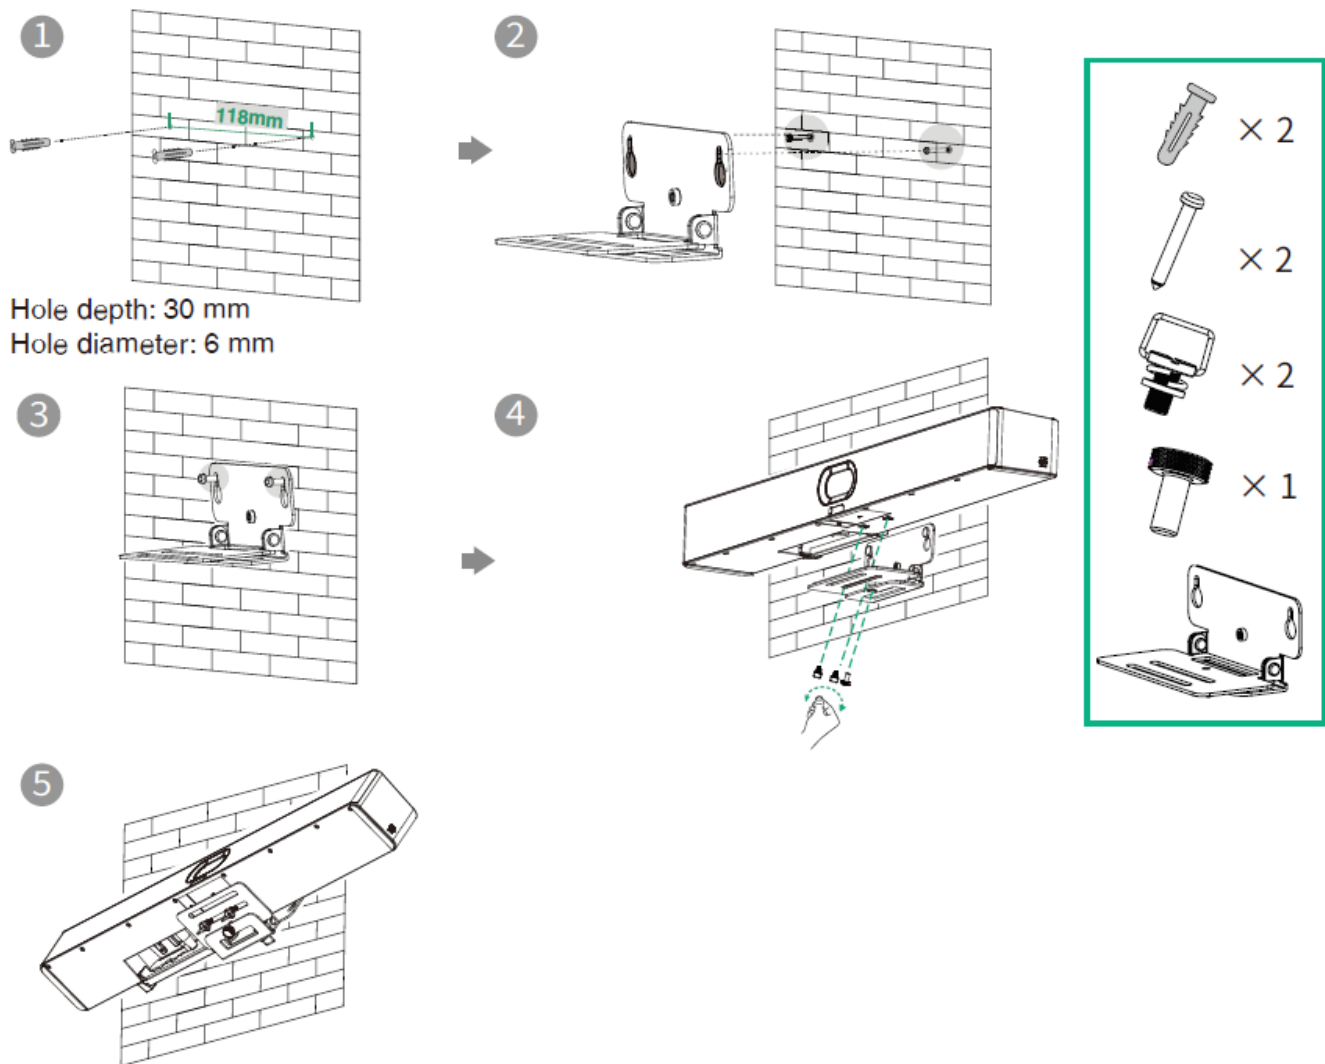


Mount above a TV or a display

NOTE

- *The M-2 bracket can be inserted into the M-1 in two directions. Here, we will focus on one direction for illustration.
- Due to device weight, it is advisable to avoid mounting the device on slim TVs to prevent potential falls or damage to the screen.

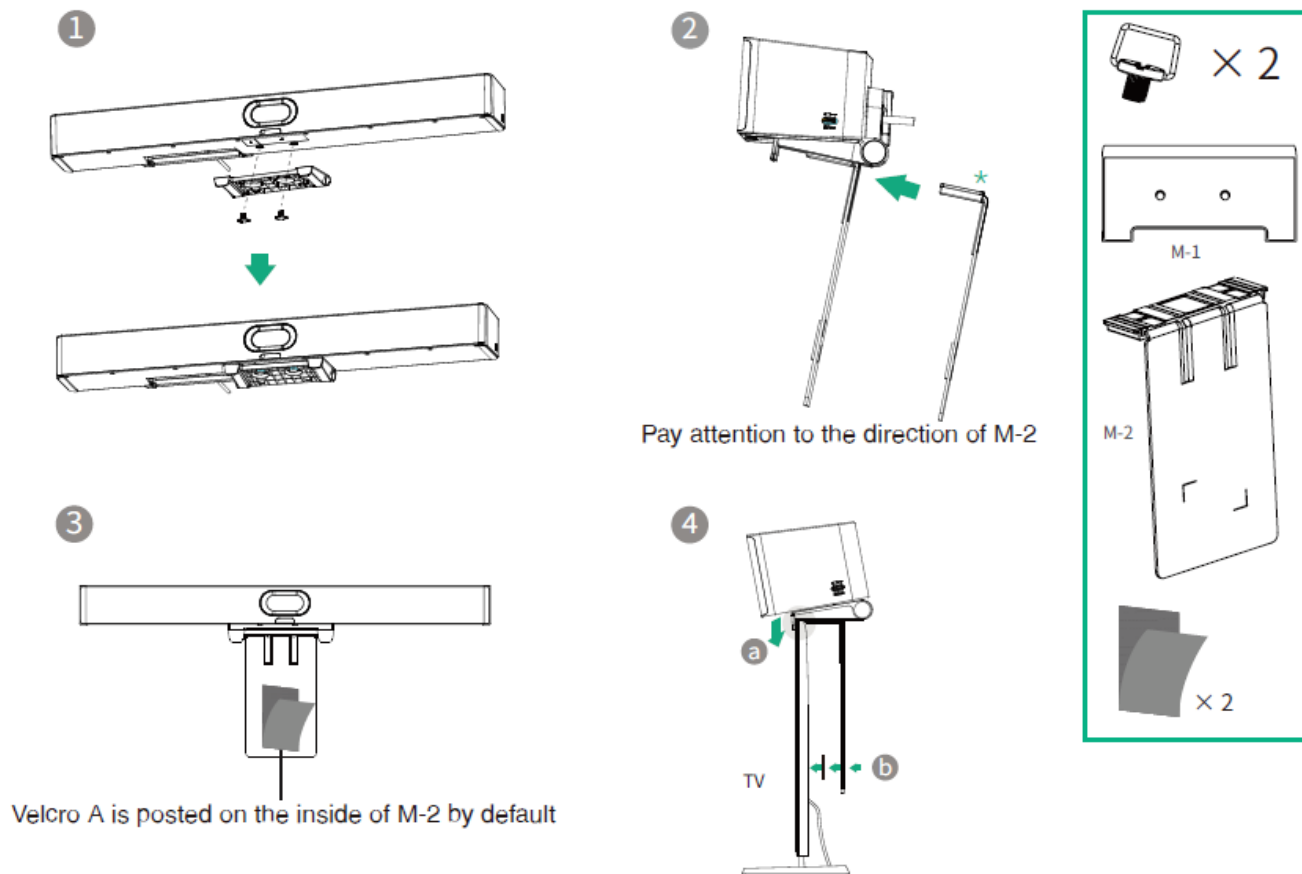

Put on a flat surface

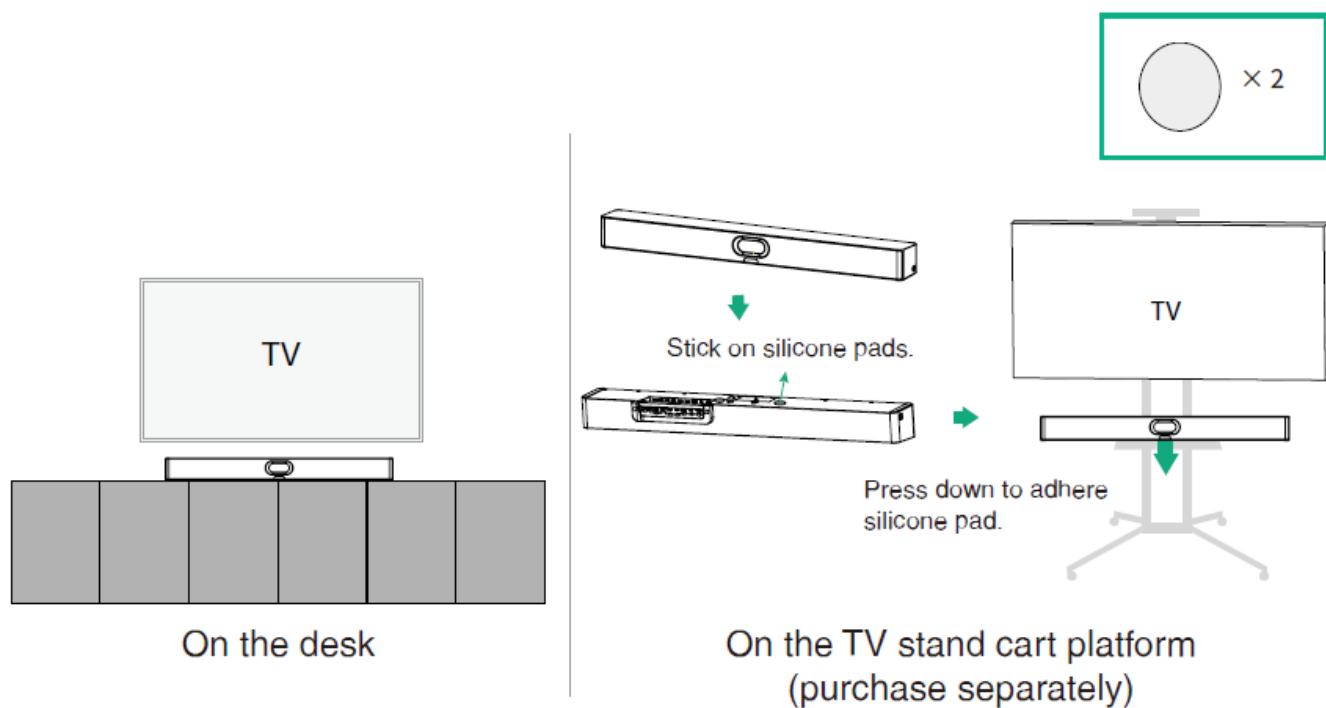


Embed in the wall

NOTE

- The mounting height affects your camera view. The recommended installation height is 110 cm above the ground.
- Keep the front of the A40 flush with the wall surface.
- The recommended on the left, right, and top sides of the A40 is less than 0.5 cm.
- Leave a 5 ± 0.5 cm distance between the back of the A40 and the wall surface for cable connections.


- The mounting height affects your camera view. The recommended installation height is 110 cm above the ground.
- Keep the front of the A40 flush with the wall surface.
- The recommended on the the left, right, and top sides of the A40 is less than 0.5 cm.
- Leave a 5 ± 0.5 cm distance between the back of the A40 and the wall surface for cable connections.

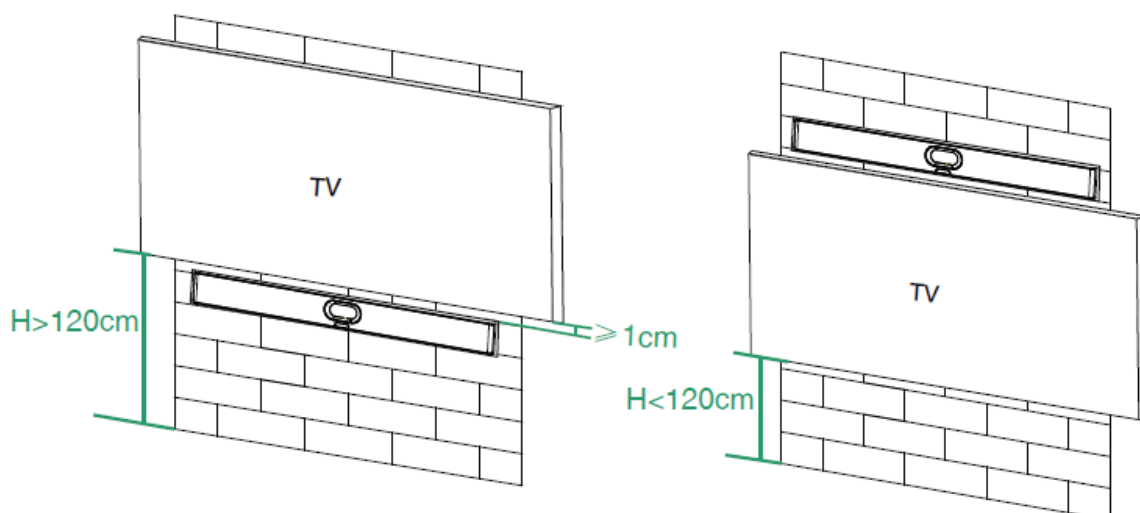


Mount on the table-top stand

NOTE

Refer to [Adjust Camera Tilt](#) section for bracket adjustment.

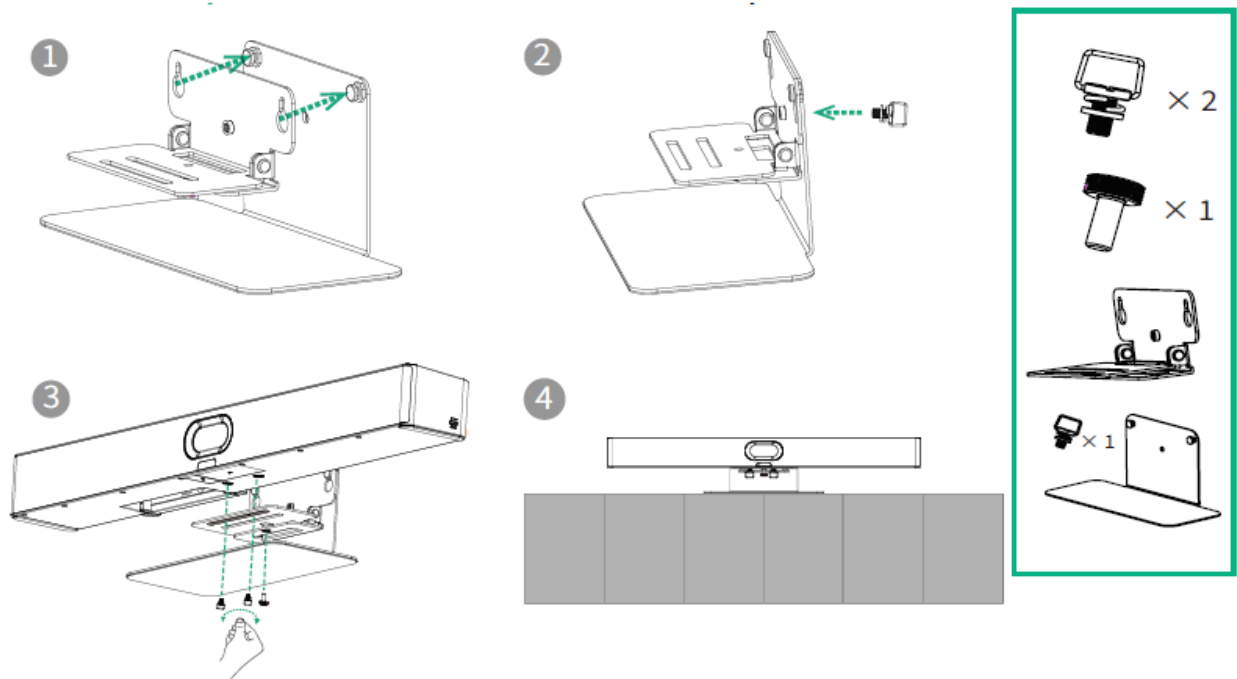

Adjust Camera Tilt

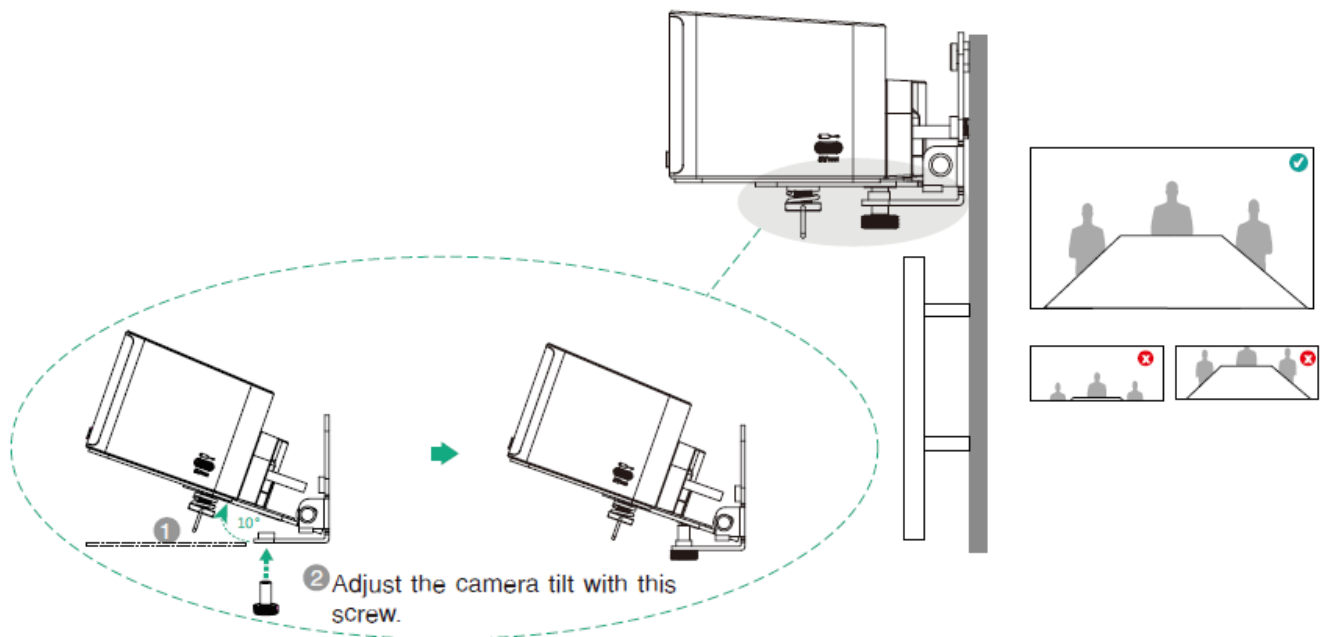

Supported Accessories

For more information, please refer to [Teams Room Accessories Compatibility Lists](#)/[Zoom Rooms Accessories Compatibility Lists](#).