


# MTouchPlus-EXT Installation


## Package Contents

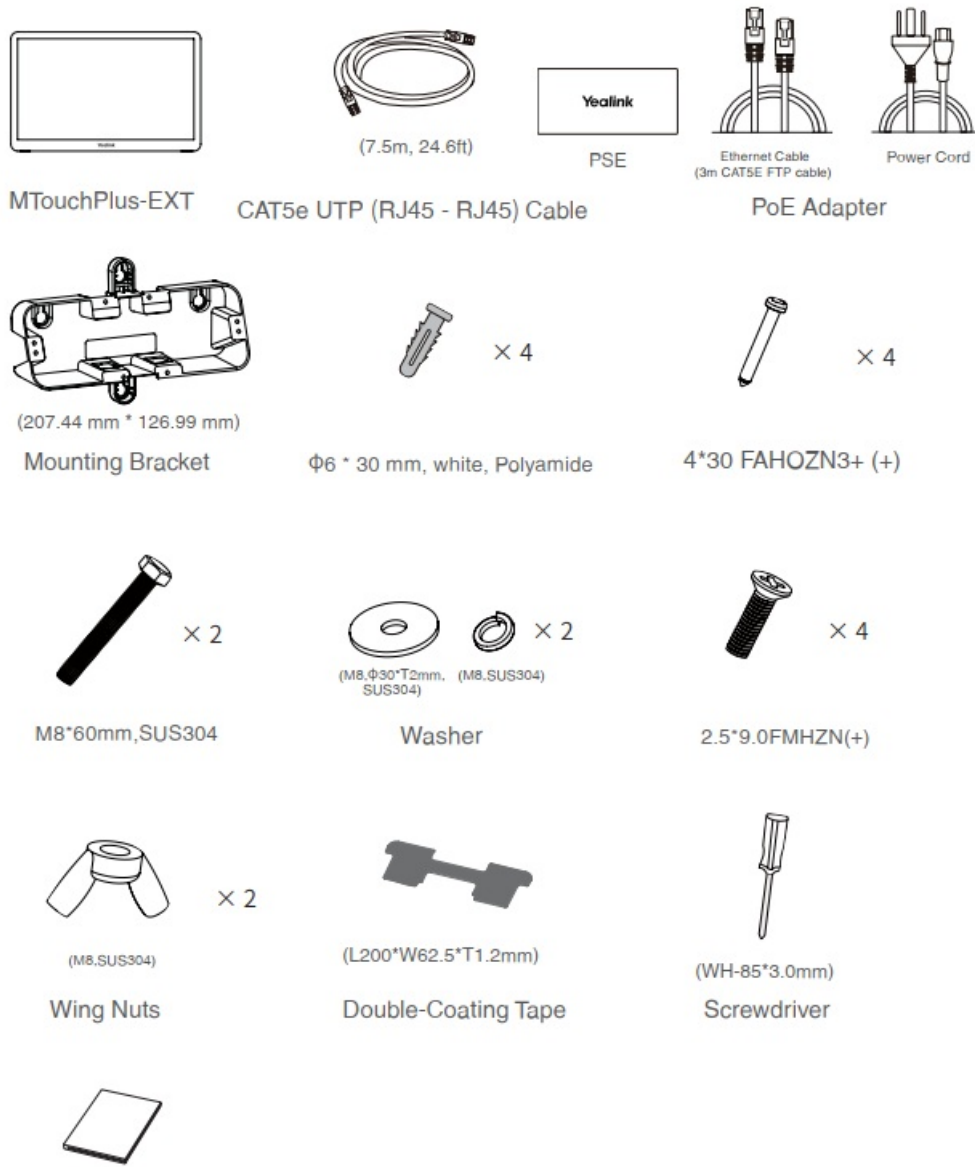


## Installation

### Table Installation

- Put on the table

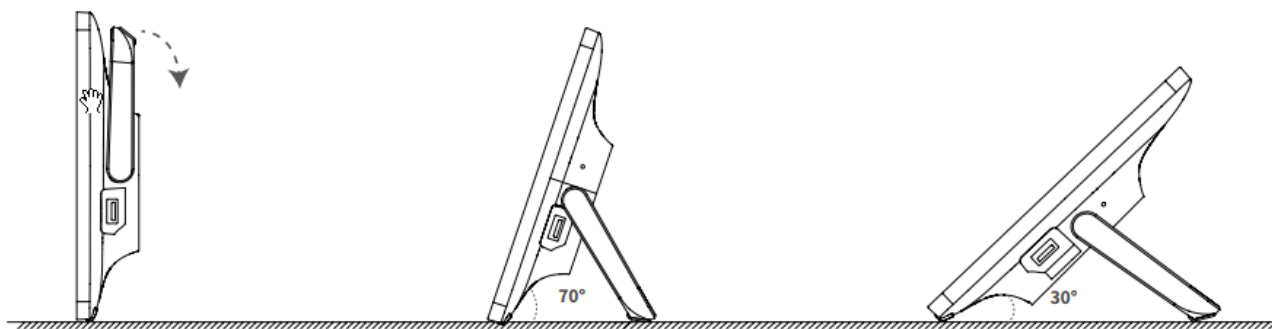


### - Paste on the table

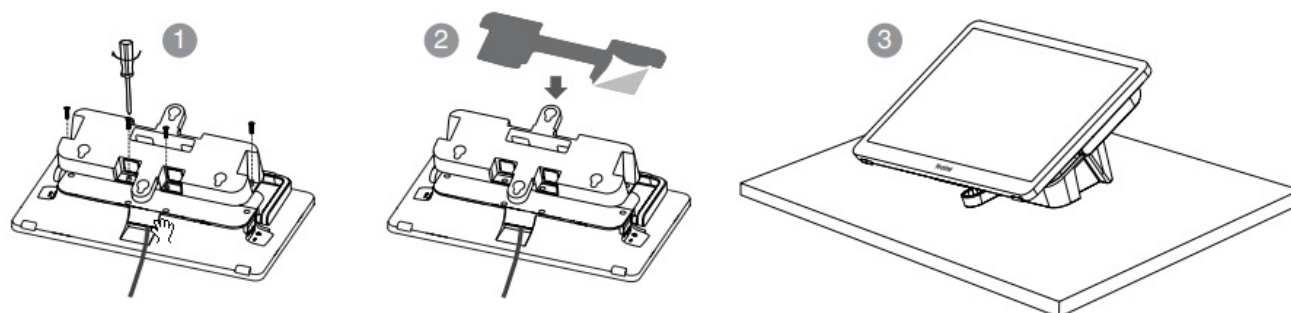


### NOTE

Please select the outlet hole according to your needs.

### - Fixed on a table

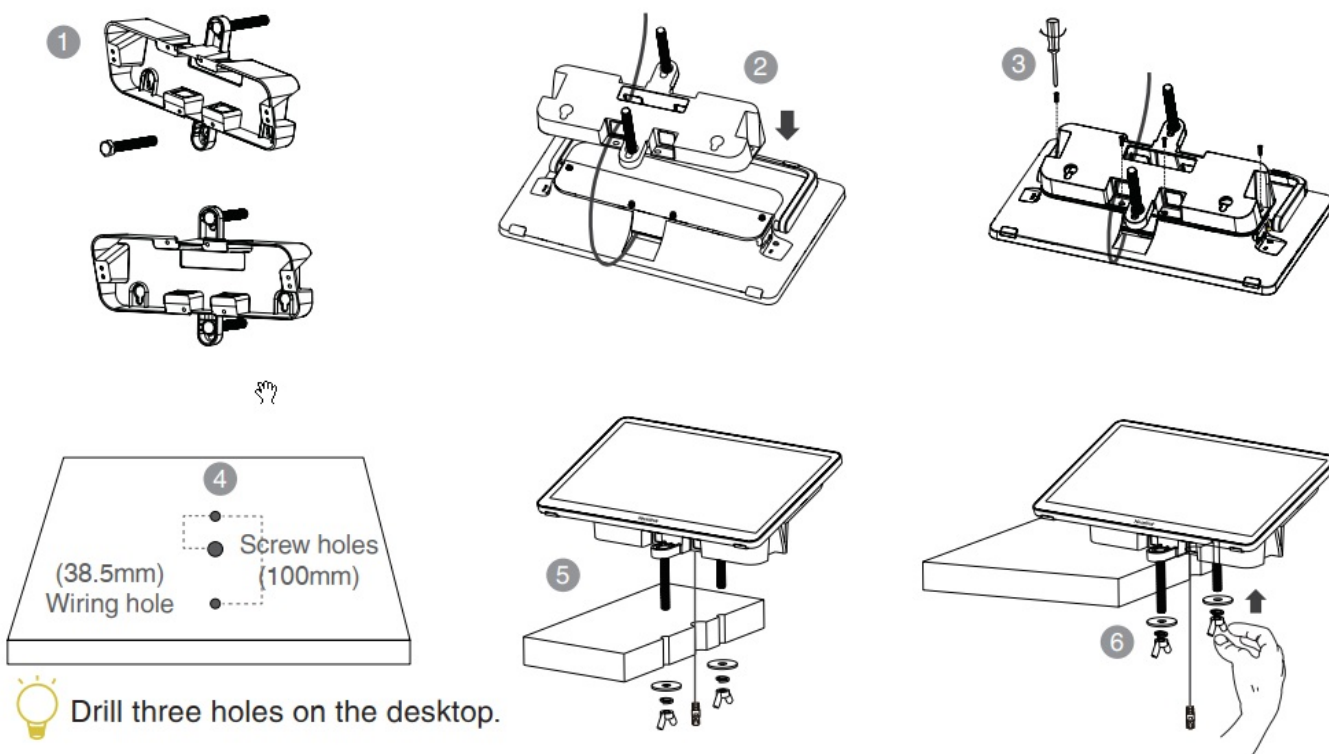

## Wall Installation

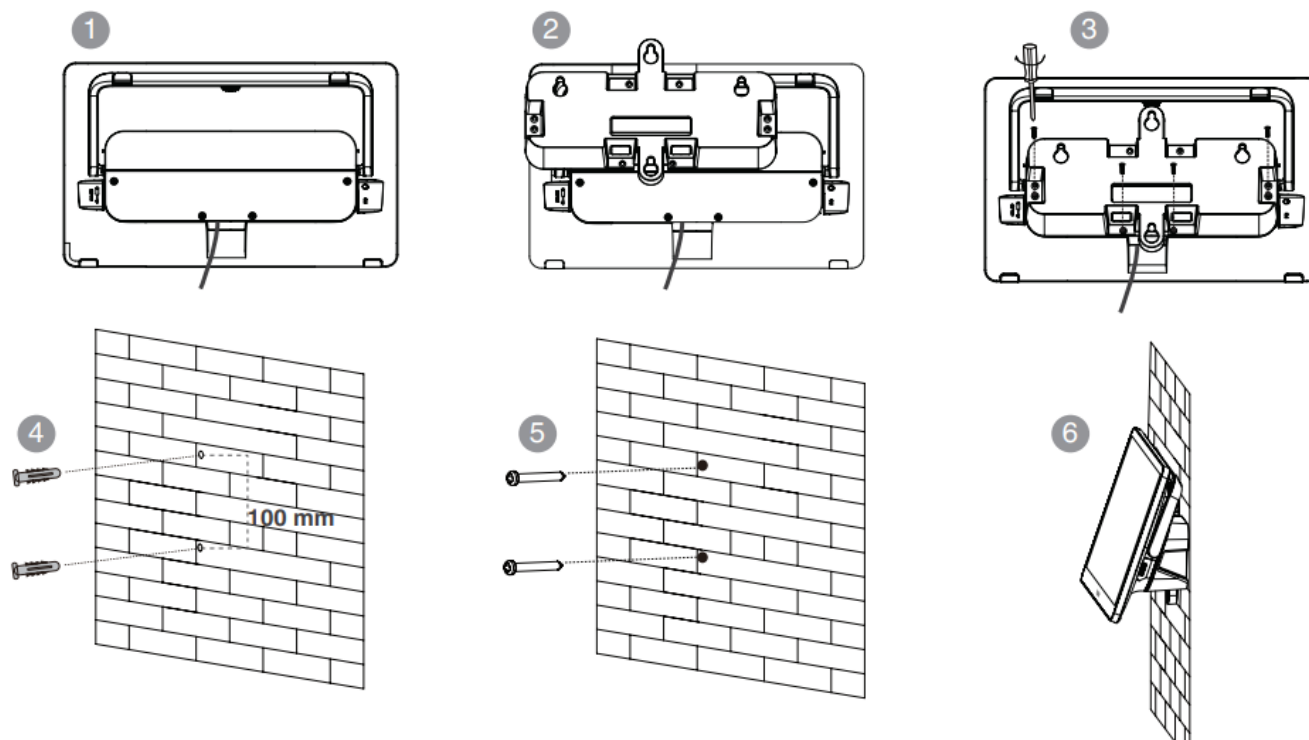


We recommend that the height of the wall installation is 1m~1.5m from the ground.


Please select the outlet hole according to your needs. If the conference room environment allows, you can also wire through the wall.

## Connection

- Assemble your MTouchPlus-EXT

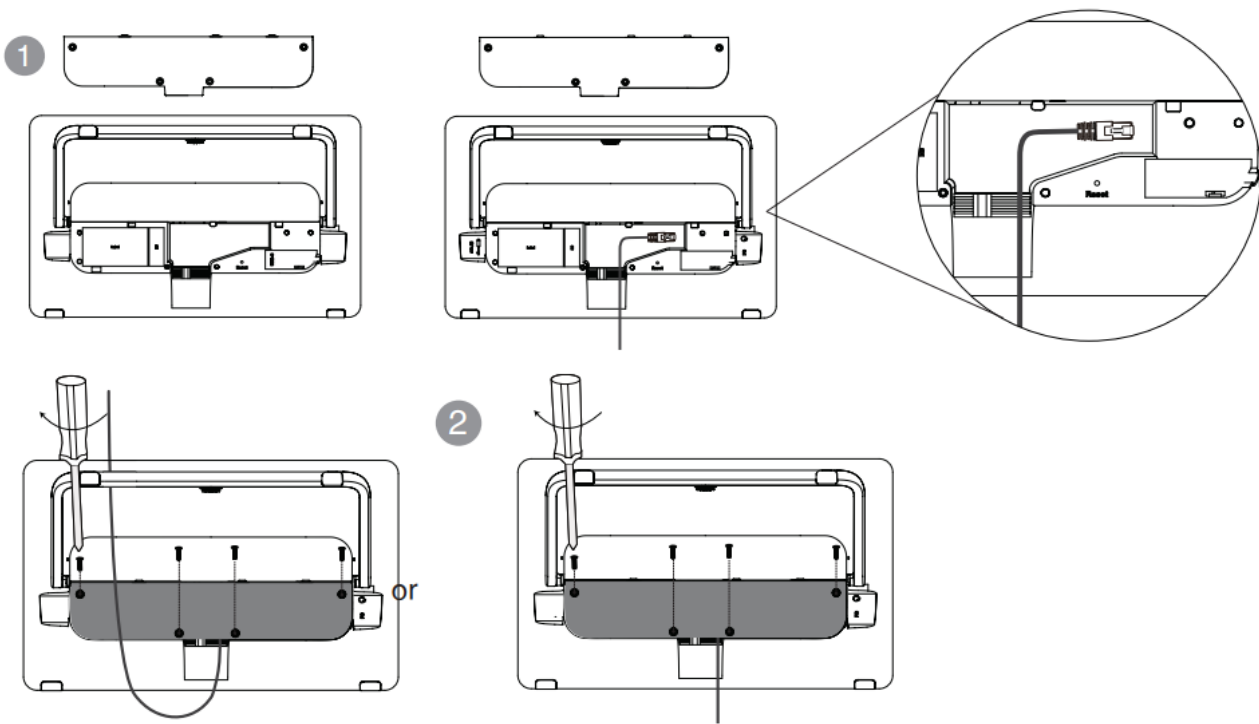

#### - Connect your MTouchPlus-EXT

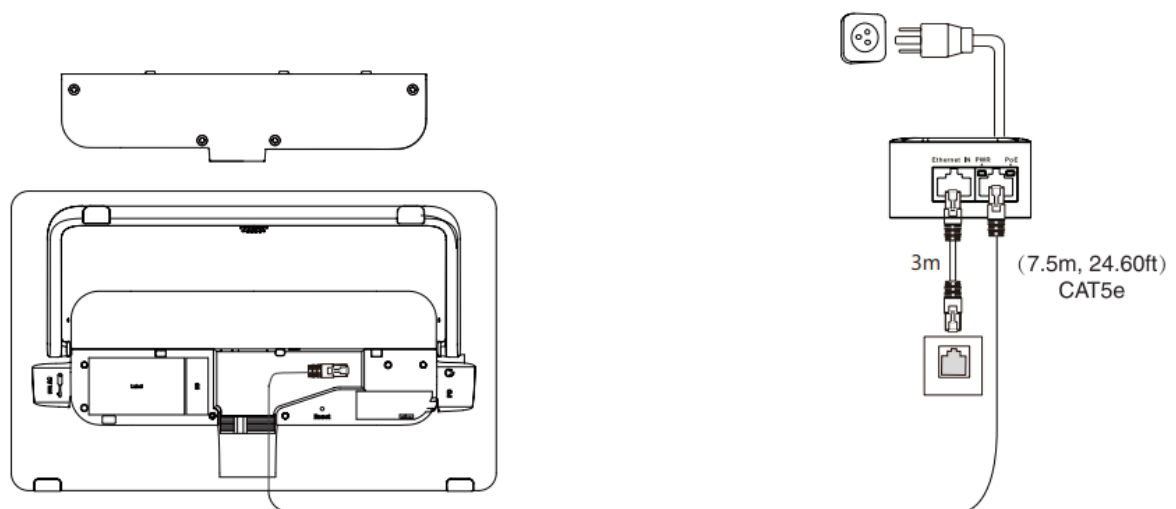

#### NOTE

1. MTouchPlus-EXT needs to be connected to the same LAN as MTouch Plus.
2. You can directly power MTouchPlus-EXT by using a PoE switch in the same LAN as MTouchPlus.

#### - Pair your MTouchPlus-EXT with endpoint

##### For MVC endpoints:

Enter the MTouch Plus IP address and PIN code according to the on-screen prompts in the MTouchPlus-EXT, then

the system will be automatically paired with the MTouchPlus-EXT

**TIP**

Go to **Device Status > IP** in Yealink RoomConnect, you can obtain the IP of MTouch Plus.


## Deployment

**NOTE**


1. During the pairing process, the PoE switch needs to be connected to the network.
2. The switch connected to MTouch EXT cannot be connected to other accessories on the same network. Otherwise, the MTouch Plus will be recognized as a sub-device and cannot obtain an IP address.

**There are two deployment methods to power the MTouch Plus-EXT.**

- Deployment using the PoE Adapter included in the package.


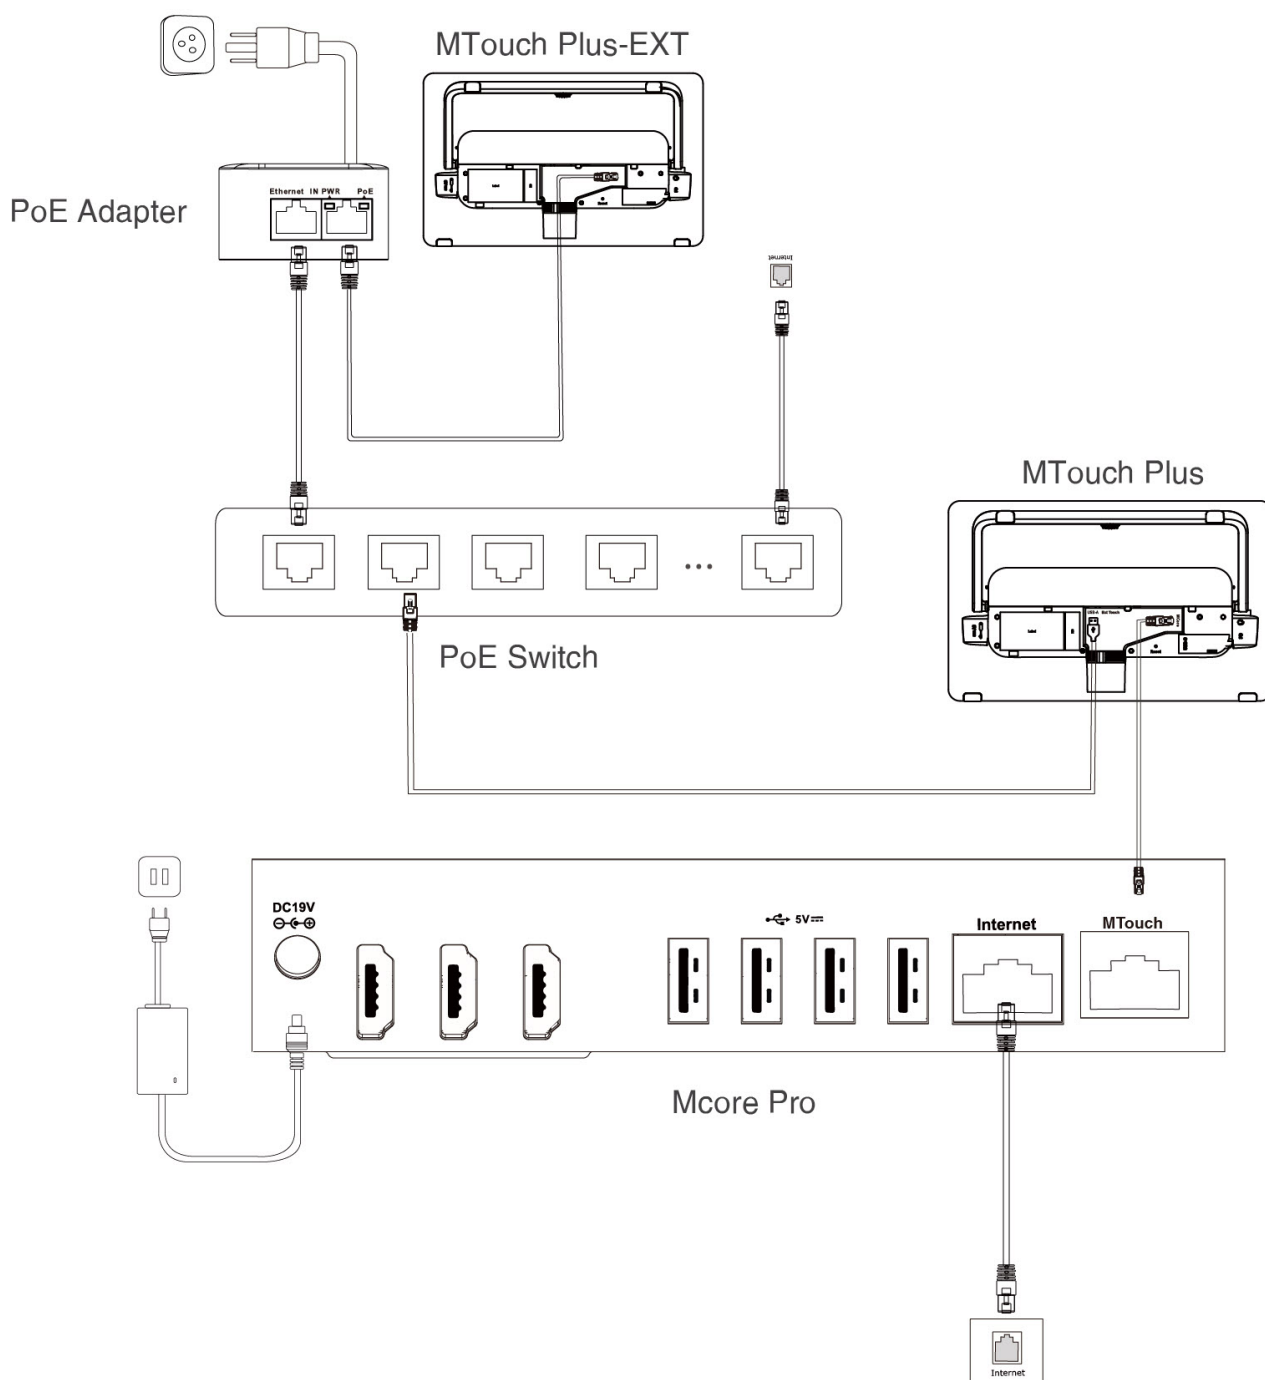


- Deployment using the PoE Switch.

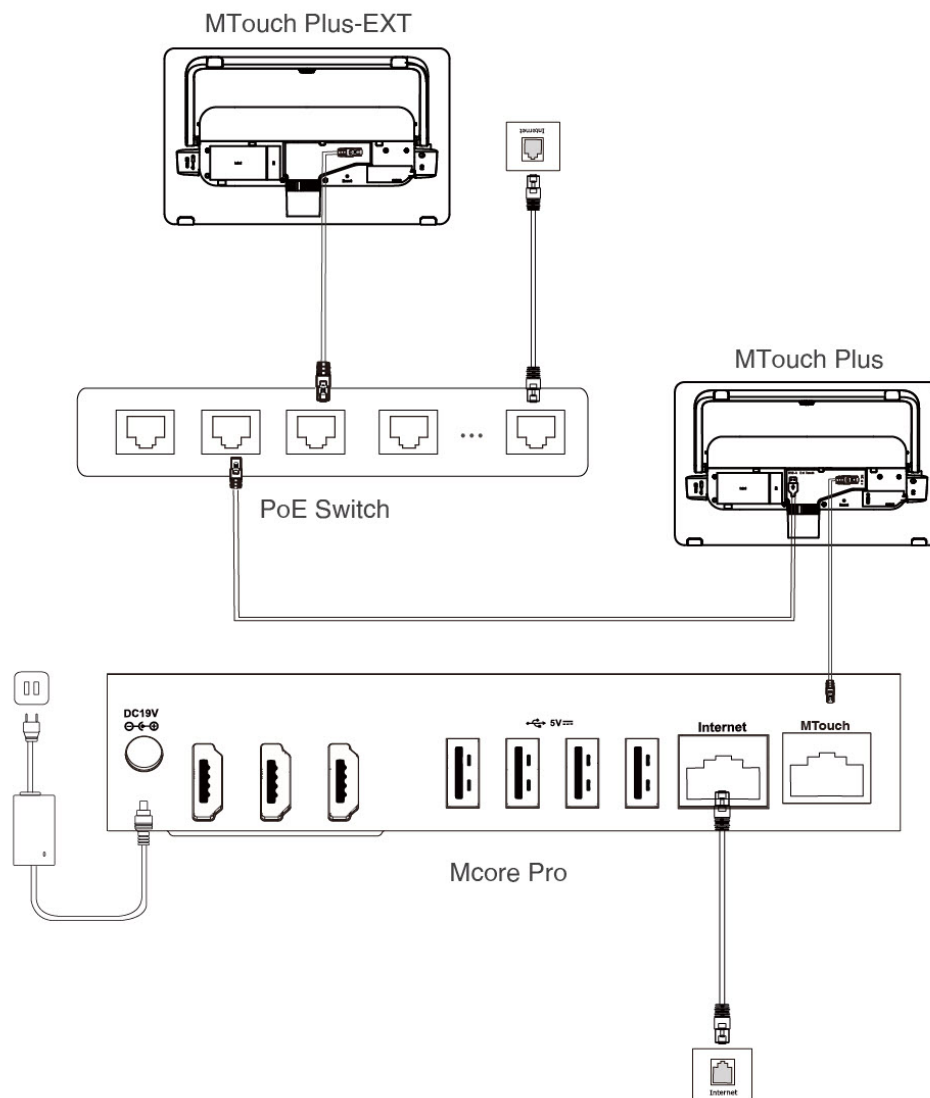

## Pairing


- Click **Room Controls - Status** on the MTouch Plus and note the IP address of the MTouch Plus.

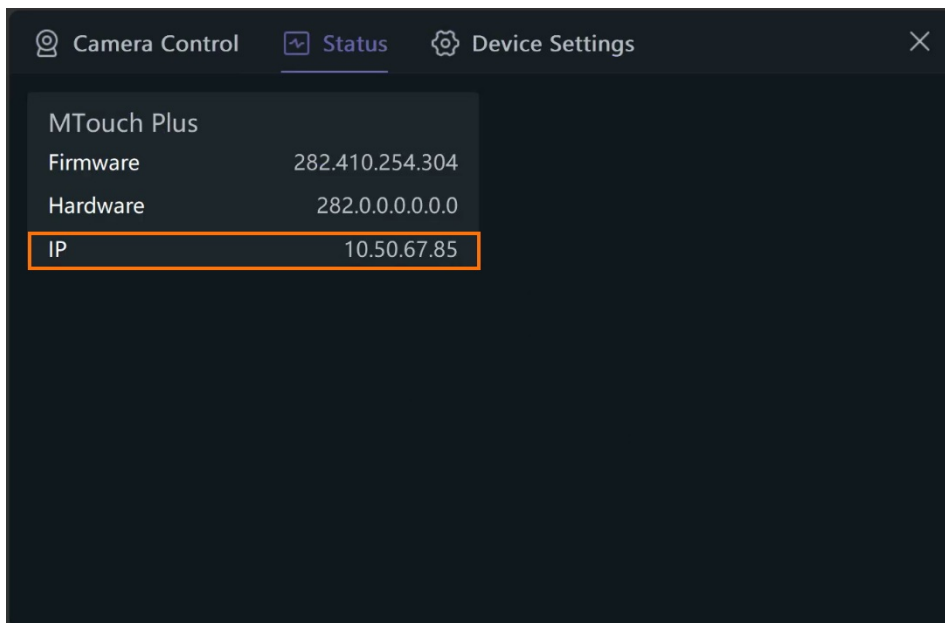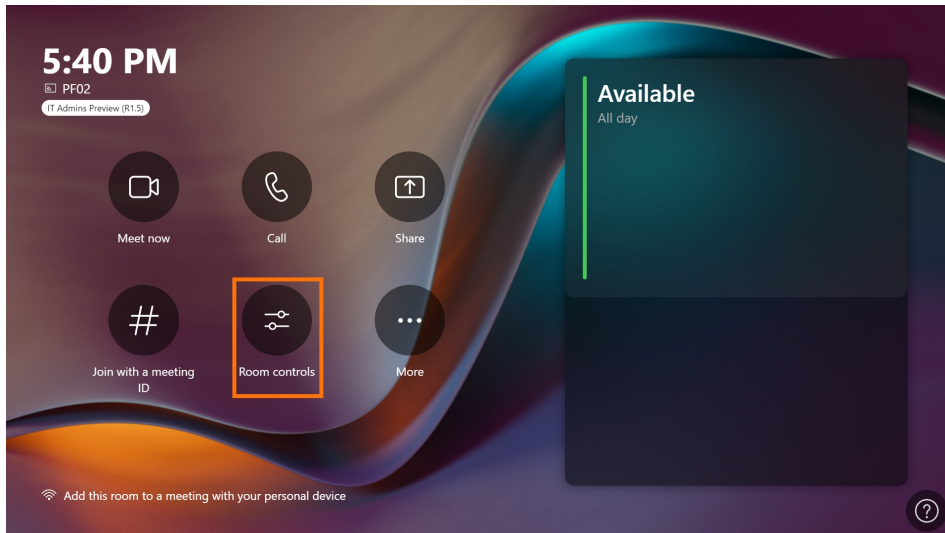


**NOTE**

If the above is done correctly, the IP address of the MTouch Plus-EXT and the IP address of the MTouch Plus should be on the same network segment, i.e., the first three digits should be the same.

- Enter the IP address of the MTouch Plus on the MTouch Plus-EXT.

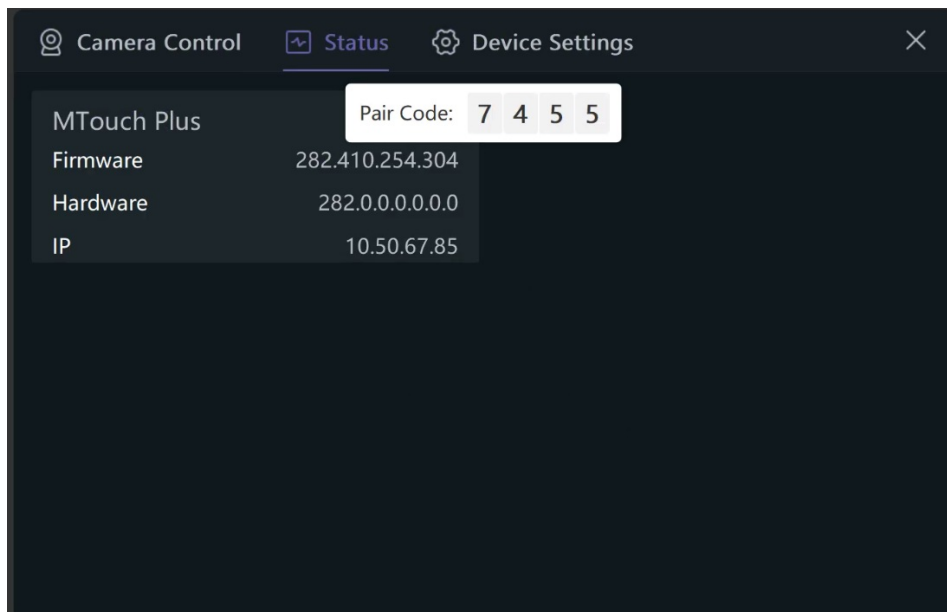

- Enter the **Pair Code** displayed on the MTouch Plus.

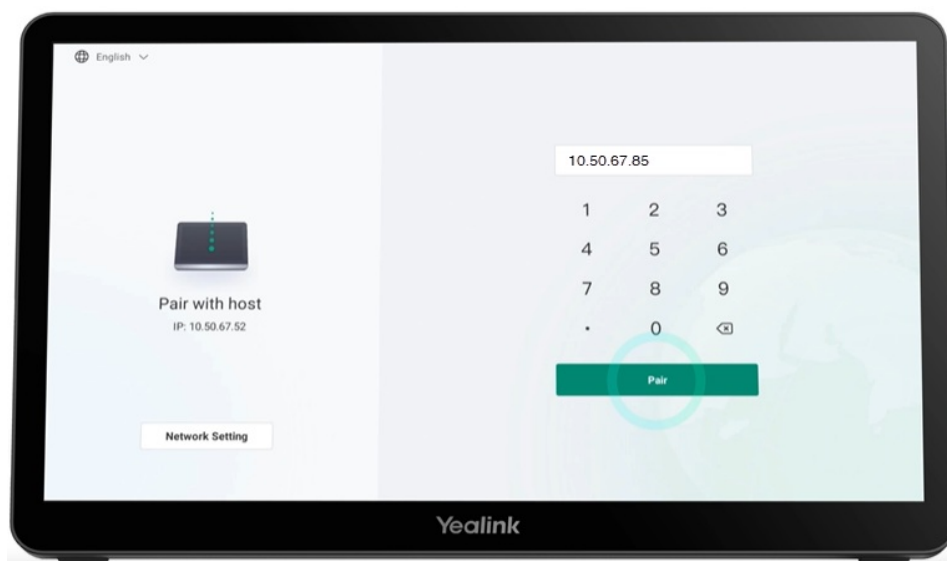

- When pairing is complete, the same screen as the MTouch Plus is displayed on the MTouch Plus-EXT.

