

HPE Aruba Networking

AP-OUT-MNT-ACC Mount Kit

Installation Guide



Hewlett Packard
Enterprise

Copyright Information

© Copyright 2024 Hewlett Packard Enterprise Development LP.

Open Source Code

This product includes code licensed under certain open source licenses which require source compliance. The corresponding source for these components is available upon request. This offer is valid to anyone in receipt of this information and shall expire three years following the date of the final distribution of this product version by Hewlett Packard Enterprise Company. To obtain such source code, please check if the code is available in the HPE Software Center at <https://myenterpriselicense.hpe.com/cwp-ui/software> but, if not, send a written request for specific software version and product for which you want the open source code. Along with the request, please send a check or money order in the amount of US \$10.00 to:

Hewlett Packard Enterprise Company
Attn: General Counsel
WW Corporate Headquarters
1701 E Mossy Oaks Rd, Spring, TX 77389
United States of America



The AP-OUT-MNT-ACC mount kit is designed to install on the AP-OUT-MNT-V1A mount bracket. The pole of the AP-OUT-MNT-ACC is 5.9" or 150 mm long with diameter of 1.97" or 50 mm.

Package Contents

Table 1: *Package Contents*

Item	Quantity
AP-OUT-MNT-ACC mount bracket	1
M8 x 20 hexagon socket screw	3 (Including 1 spare)


Customer Supplied Equipment

- S6 Allen wrench (for M8 x 20 Hexagon socket screws)

To mount the AP-OUT-MNT-ACC to the AP-OUT-MNT-V1A mount bracket, follow these steps:

1. Use the two M8 x 20 hexagon socket screws to attach the AP-OUT-MNT-ACC mount bracket to the AP-OUT-MNT-V1A mount bracket.

Figure 1 Attaching AP-OUT-MNT-ACC to AP-OUT-MNT-V1A

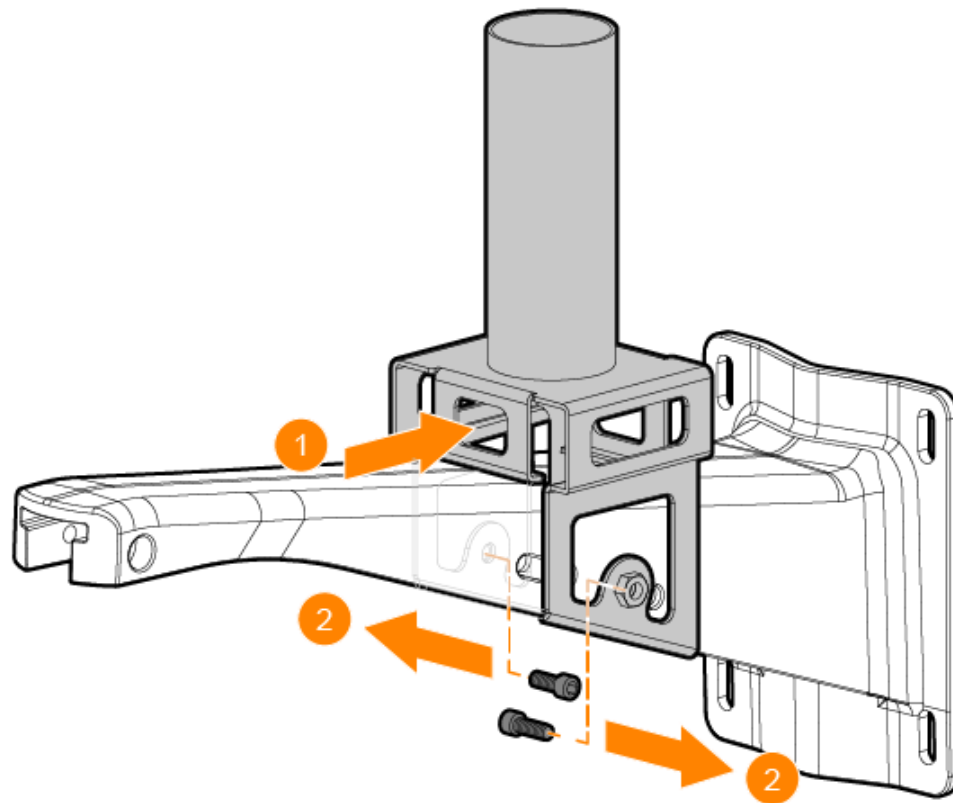

2. (Optional) To mount the AP-ANT-MNT-U mount kit to the pole of the AP-OUT-MNT-ACC, refer to the [AP-ANT-MNT-U Mount Kit Installation Guide](#).